 


BT HOLDER:


FLANGE TYPE

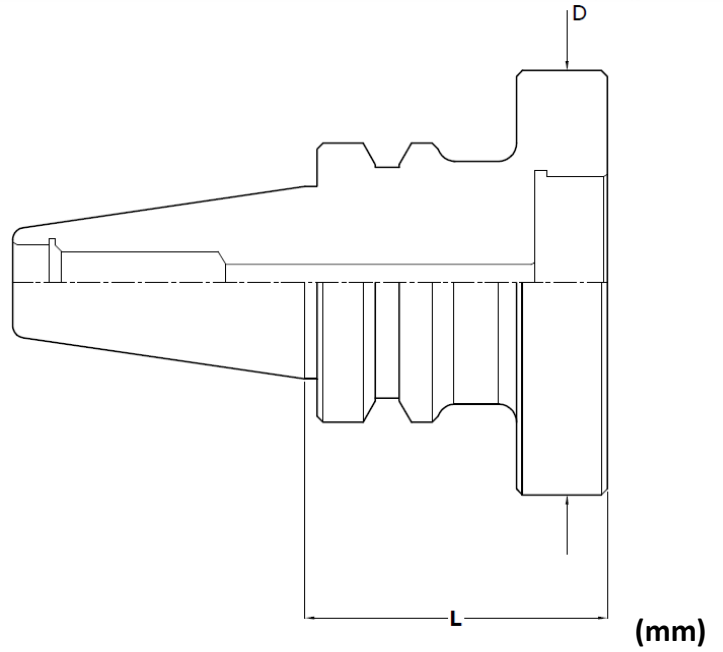

FLANGE

TAPER SIZE	DESIGNATION	GPL (L)	OD (D)
BT-30	SP-BT-3F-56	50	60
	SP-BT-3F-57	50	70
	SP-BT-3F-66	60	60
	SP-BT-3F-67	60	70
BT-40	SP-BT-4F-66	60	60
	SP-BT-4F-67	60	70
	SP-BT-4F-68	60	80
BT-50	SP-BT-5F-66	60	60
	SP-BT-5F-67	60	70
	SP-BT-5F-68	60	80

 Ordering Instruction

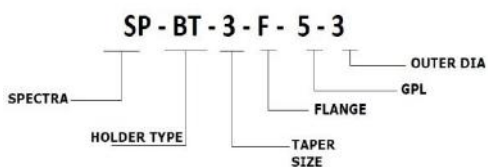

SPARES

 


GRUBSCREW



ALLENKEY


SK HOLDER:

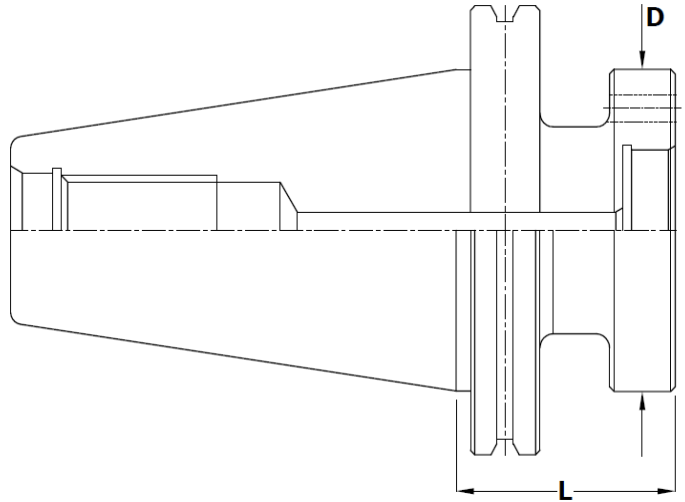

(mm)

FLANGE			
TAPER SIZE	DESIGNATION	GPL (L)	OD (D)
SK-30	SP-SK-3F-56	50	60
	SP-SK-3F-57	50	70
	SP-SK-3F-66	60	60
	SP-SK-3F-67	60	70
SK-40	SP-SK-4F-66	60	60
	SP-SK-4F-67	60	70
	SP-SK-4F-68	60	80
SK-50	SP-SK-5F-66	60	60
	SP-SK-5F-67	60	70
	SP-SK-5F-68	60	80

 Ordering Instruction

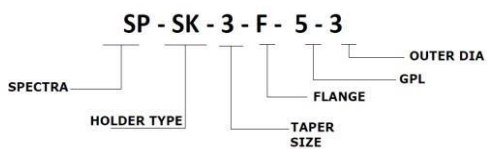

SPARES

 


GRUBSCREW




ALLENKEY

HSK HOLDER:

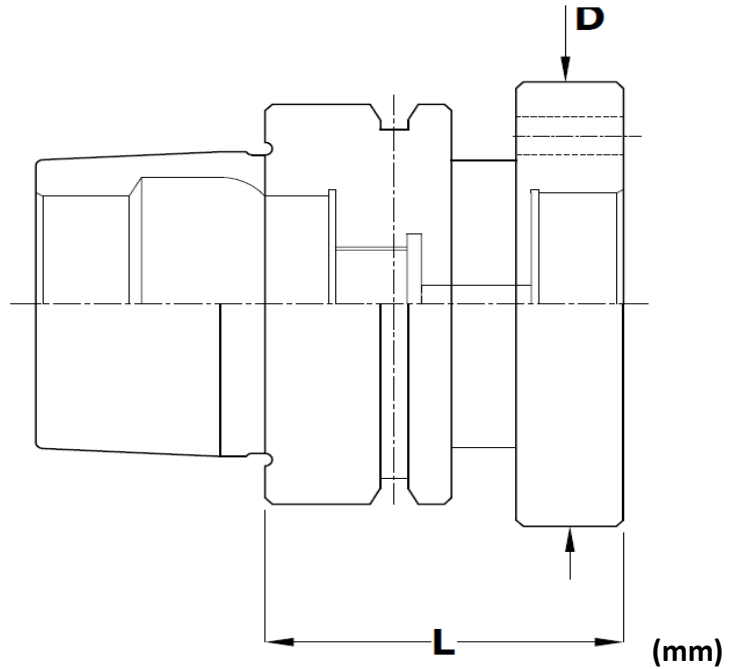

FLANGE			
TAPER SIZE	DESIGNATION	GPL (L)	OD (D)
HSK A40	SP-HSK-4F-56	50	60
	SP-HSK-4F-57	50	70
	SP-HSK-4F-66	60	60
	SP-HSK-4F-67	60	70
HSK A50	SP-HSK-5F-66	60	60
	SP-HSK-5F-67	60	70
	SP-HSK-5F-68	60	80
HSK A63	SP-HSK-63F-66	60	60
	SP-HSK-63F-67	60	70
	SP-HSK-63F-68	60	80
HSK A100	SP-HSK-10F-66	60	60
	SP-HSK-10F-67	60	70
	SP-HSK-10F-68	60	80

 Ordering Instruction

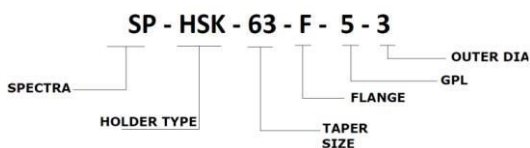

SPARES



GRUBSCREW



ALLENKEY